

# DOME<sup>™</sup> Building Automation Cybersecurity Starter Kit



Stop cyber attacks before they happen and protect building automation networks to the edge.

#### **Key Features and Benefits**

- Secures building automation devices to the edge of the network
- Device-level security and network traffic privacy
- Plug-and-play implementation
- Supports BACnet/IP and BACnet MS/TP devices
- Retrofits easily into existing networks and supports legacy devices
- Reduces the cyber attack surface by requiring all devices to be authenticated
- Provides real-time protection and prevents cyber attacks

### Applications

- Commercial Buildings
- Retail Spaces
- Educational Facilities
- Hospitals
- Manufacturing Facilities
- Government Buildings

## How to Order

To order by email: IntelligentSolutions@arrow.com For more information email: info@Veridify.com call 203.227.3151



#### Starter Kit Components

Each starter kit contains everything you need to provide basic protection for a building. The kit contains two DOME Sentry devices, one DOME Interface Appliance, and a license for DOME Server.



#### **DOME** Server

The DOME Server is a SaaS platform that provides a dashboard for device visibility, data logging, analytics, and alerts, and also provides a root-of-trust for every DOME device in a building.

#### DOME Interface Appliance (DIA)


The DIA is the local management and authentication device that is located on the OT network and connects to the cloud-based DOME Server for reporting and credential management. The DIA connects locally to building controls that have the DOME Client software built-in, or to DOME Sentry devices that provide security for existing building controls.

## DOME Sentry

The DOME Sentry is the security appliance that protects connected devices such as controllers, sensors, and actuators. DOME Sentry devices automatically authenticate to each other and create a secure tunnel that protects all messages, commands, and data.

(Note: DOME Sentry software operates on multiple hardware platforms which are used to ensure availability. Some shipped units may look different than the image shown but are functionally equivalent.)



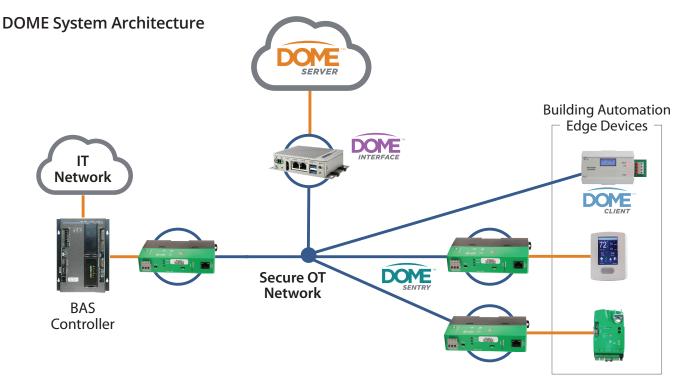

#### **Technical Specifications**

	DOME Interface Appliance	DOME Sentry
	10-30 VDC	24 VAC
	2 x Ethernet 2 x USB 3.2	2 or 3 Ethernet ports depending on model
ons	3.9 x 2.8 x 1.2 in	3.9 x 6.75 x 1.6 in
e	Aluminum, IP30	Plastic
g	Stand, wall, DIN rail (optional)	DIN rail or shelf
ig Range	-4 to 140 °F / -20 to 60 °C	
g	Stand, wall, DIN rail (optional)	

#### How To Order

The Starter Kit can be ordered by contacting Arrow Intelligent Solutions, https://www.arrow.com/AIS

Description	Veridify Part #
DOME Starter Kit	DOME.KT.01.018
DOME DIA	DOME.DA.01.000
DOME Sentry	DOME.SY.00.018



To order by email: IntelligentSolutions@arrow.com For more information email: info@Veridify.com or call 203.227.3151



1-888-272-1977 www.Veridify.com info@veridify.com 100 Beard Sawmill Rd., Suite 350 Shelton, CT 06484

©2022 Veridify Security Inc. All rights reserved. All trademarks are the property of their respective owners. Certain material is based upon work supported by the National Science Foundation; any views expressed are those of the author(s). For information covering our products, including trademarks, patents, and export control regulations, see Veridify.com/terms-of-use. 06.10.22