



**DOME™ Building Automation Starter Kit**  
**Getting Started Guide**

P/N DD-0010 | Rev. 1.2 | October 2022

---

## Proprietary Notices

### 1. Legal Disclaimer

The use of DOME is subject to Veridify's standard license terms and conditions as set forth in the DOME Building Automation Starter Kit - Proprietary Notices; License Terms and Conditions ("Standard Terms"), as well as the Software-as-a-Service Agreement. This documentation does not expand or otherwise modify Veridify's Standard Terms or mutually, in writing, agreed upon terms, including, but not limited to, the disclaimers and warranties expressed therein.

### 2. Copyright Notice

Copyright © 2019 - 2022 Veridify Security Inc. All rights reserved.

Third Party notices, terms, and conditions pertaining to third-party software and hardware can be found at:

<https://www.veridify.com/terms-of-use/>

### 3. Trademark Notice

Device Ownership and Management Enrollment, and DOME are trademarks or service marks (individually and collectively, "Marks") of Veridify Security Inc. ("Veridify"). The Marks displayed in this documentation or on any hardware or in any software represent some of the proprietary rights currently owned or controlled by Veridify and are not intended to be a comprehensive compilation of all Veridify's worldwide proprietary ownership rights. See, <https://www.veridify.com/terms-of-use/> for representations of additional Marks owned or controlled by Veridify and additional guidance with respect to Veridify Marks All other trademarks and service marks, which may be registered in certain jurisdictions, belong to the holder or holders of such marks.

### 4. Patent Notice

DOME is protected by certain patents. In accordance with the virtual marking provisions of the American Invents Act, 35 U.S.C. 287(a), See, <https://www.veridify.com/terms-of-use/>, which enumerates the list of products and components that may be protected by one or more patents, or patents pending in the U.S. and elsewhere. Certain third-party components embedded in DOME may be protected by certain patents of such third-party; reference should be made to the third-party documentation.

# DOME™ Building Automation Starter Kit — Getting Started Guide

**NOTE: This starter kit provides the ability to test or deploy DOME for a limited number of devices. Deployment for a full building will require additional DOME Sentry devices.**

## 1. About this guide

The DOME Building Automation Starter Kit enables system integrators to install a fully functioning pilot scale implementation of Veridify’s DOME cybersecurity protection for building automation. For a typical building, you will install a DOME Sentry™ security gateway to protect the Building Automation System (BAS) controller, and a second DOME Sentry to protect a BACnet device as shown in Fig. 1. The DOME Sentries form a secure OT network that provides root of trust authentication as well as data protection between all devices on the secure network. Lastly, you will install a DOME Interface Appliance™ (DIA™) that will enable the secure onboarding of the DOME Sentry devices. Once the OT network is up, the DIA will receive log messages from each of the Sentries and forward those to the DOME Server for anomaly detection and inclusion in a security dashboard.

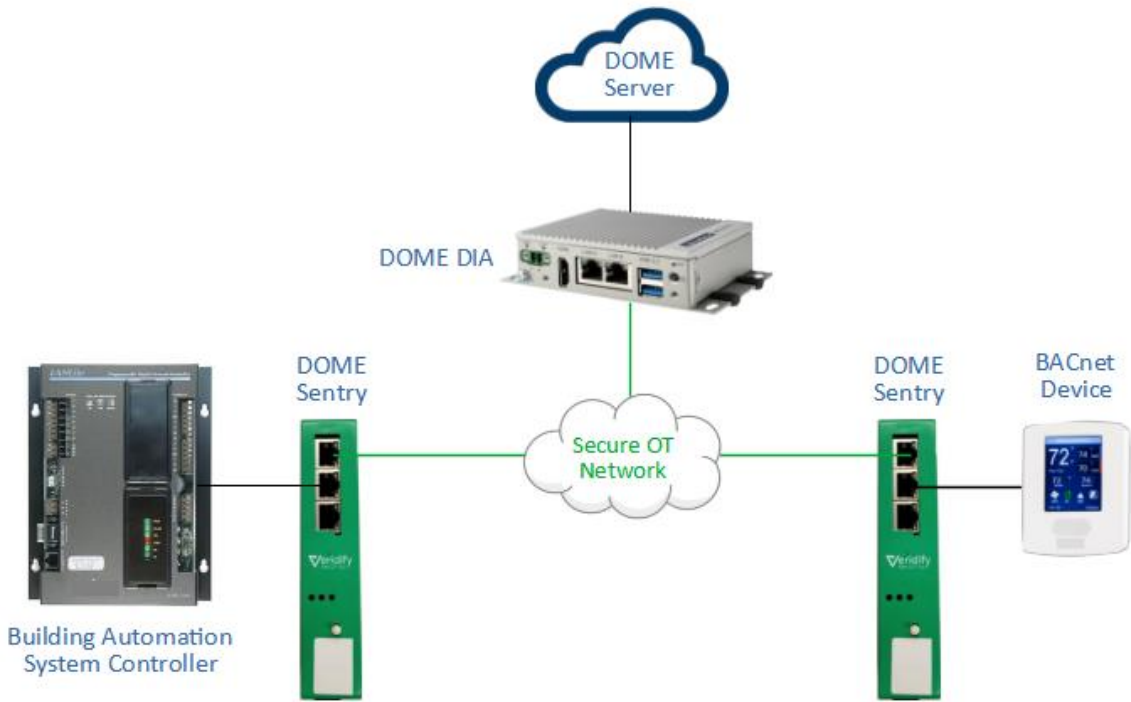


Fig. 1. Starter kit architecture

## 2. Overview of DOME Building Automation Starter Kit

Your starter kit contains everything you need to provide basic protection for a building.

### 2.1. Kit contents (see Fig. 2.)

Your DOME Starter Kit contains:

- Two (2) DOME Sentry devices
- One (1) DOME Interface Appliance (DIA)
- One (1) DIA power supply – included with DIA
- One (2) USB console cables to connect to the Sentry devices
- Four (4) ethernet cables
- Documentation set

Not included in kit:

- 24VAC Power supply for DOME Sentry devices
- HDMI Monitor (to configure DIA)
- USB Keyboard (to configure DIA)
- BACnet/IP devices and controllers



Fig. 2. DOME Starter kit contents

### 3. Documentation and procedures

You will refer to several documents that will guide you through the process of qualifying a site for installation, installing the equipment, setting up accounts, and testing the installation.

Documentation included in the kit:

- DD-0010 Getting Started Guide (this document)
- DD-0011 Site Prequalification
- DD-0012 Site Survey Guide
- DD-0013 Installation Guide
- DD-0014 DOME SaaS Account Registration
- DD-0015 Testing and Troubleshooting Guide
- DD-0016 Proprietary Notices; License Terms and Conditions

It is recommended to read the documentation in the order presented here (i.e., DD-0010 – DD-0016).

### 4. Technical Support

Please direct all technical support inquiries to: [support@veridify.com](mailto:support@veridify.com) or by phone: 203-227-3151 (Option 6)